

QUICK GUIDE

Somfy® External Li-ion Rechargeable Battery Pack

To avoid errors and save valuable time, please read these instructions before installing your external rechargeable battery pack.

GETTING STARTED

Thank you for purchasing an External Rechargeable Li-ion Battery Pack. All of the required installation components are enclosed in your package along with these instructions. Please thoroughly review these instruction before beginning the installation.

- Be certain you have the correct Somfy plug-in charger for your battery pack (see Ref/fig below #9025166)
- Battery should be charged completely prior to installation.
- Ensure you comply with the recharging instructions.
- The optimum recharging temperature is between 32°F and 113°F.
- Do not disassemble or alter the battery.
- Must only be used with Somfy External Battery WireFree motors (refer to the motor instructions for programming).
- Do not use or install this product outdoors.
- Product must never be dropped, immersed in water or exposed to flammable materials.
- Battery pack should always be replaced with Somfy certified replacement.

External Li-ion Rechargeable Battery Pack #9021217 items include:



1 Battery



(1 Pair) of Wall/Ceiling Mount Brackets
(1 Pair) of Headrail Mount Brackets
(1 Pair) of screws and mounting anchors

 
Accessories:



Charger with 6ft Cable
#9025166



8" Charger External Cable
#9021131
(Wood & Fauxwood Blinds Only)

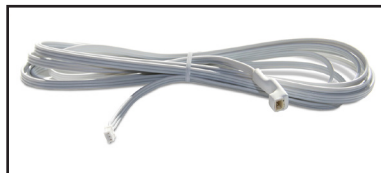


94.5" Charger Extension Cable
#9021016




Motor Extension Cable
10" - #9018623
48" - #9016736
96" - #9018624

Mounting Methods

 A) With a wall/ceiling bracket.

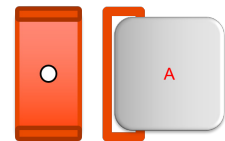

 B) With a headrail mounting bracket.

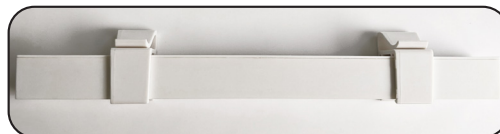

1020968

Charging Li-ion Battery Pack

 
Note: When using tubular motors with LED indicator on the motorhead LED will slowly blink (red) when battery requires charging.



STEP 1


If battery pack charging port is accessible simply plug charger into battery pack charging port and skip to STEP 4. *If battery charging port is not accessible, follow STEP 2.*

NOTE: Using battery charging accessory (Ref. 9021131 or 9021016) illustrated above can facilitate access to the battery pack charging port.

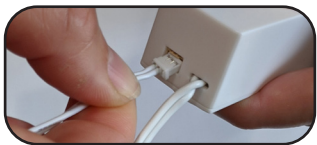


STEP 3

Attach small connector from wall charger to charging port of battery pack.

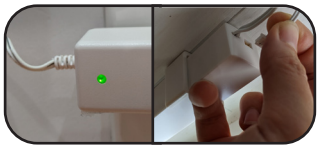

STEP 5

Once LED illuminates GREEN, battery is fully charged. Disconnect wall charger connector from battery charging port, then remove wall charger from electrical outlet.

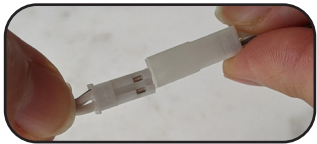


STEP 7

Reconnect battery pack cable connector to motor cable connector.



STEP 2

Disconnect battery pack cable connector from motor cable connector, then simply remove battery pack from brackets to charge.

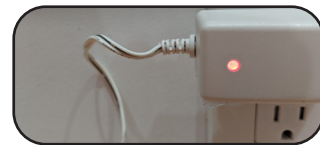

STEP 4

Plug Wall charger into a nearby electrical outlet. The LED indicator will illuminate RED while battery is charging.



STEP 6

If battery was removed from brackets for charging, simply reinstall battery pack into mounting brackets.



STEP 8

Manage the placement of all cords making certain they do not interfere with movement of window covering. Be certain motor antenna is exposed for optimal radio performance.

CHILD SAFETY

Young children can **STRANGLE** in cord loops and in the loop above the cord stop. They can also wrap cords around their necks and **STRANGLE**.

- Always keep cords out of children's reach.
- Move cribs, playpens and other furniture away from cords. Children can climb furniture to get to cords.
- Do not tie cords together.
- Make sure cords do not twist together and create a loop.

SAFETY LABELS

In compliance with WCMA/ANSI safety standards the warning labels on the bottom rail are designed to be permanent. **DO NOT** remove the permanent warning label on the bottom rail. This assures that future owners of this product will be aware of potential dangers associated with this shade.

